


Product Data Sheet

Max/Min Thermometer

Reference 75000-001/A

This instrument determines maximum and minimum temperatures of the day. Press the button so that the 2 blue indicators are in contact with the mercury. They will move according to the change in temperature. These are to be read at the bottom of the indicators on either side of the thermometer.

Should the mercury column have separated during transport, in order to regroup the mercury hold the thermometer horizontally and shake slowly but forcefully (like a medical thermometer).

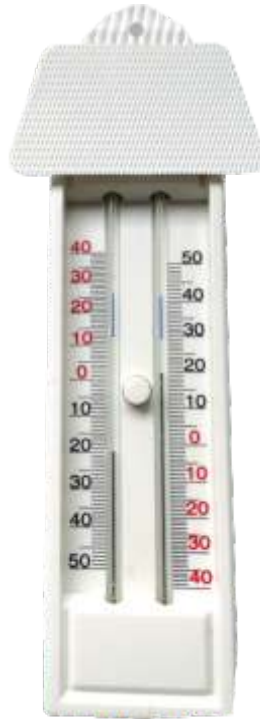

Specifications

- -40+50°C
- Plastic body
- With Roof
- Push
- Reset button
- Mercury filled
- In blister



In the case of breakage do not swallow the liquid.

Alla France

Z.I. du Bompas - 13, rue du Bompas - Chemillé - 49120 Chemillé-en-Anjou - FRANCE

Tél. + 33 (0)2 41 30 55 08 - Fax +33 (0)2 41 30 34 67

www.allafrance.com


France